

FIG. 1B


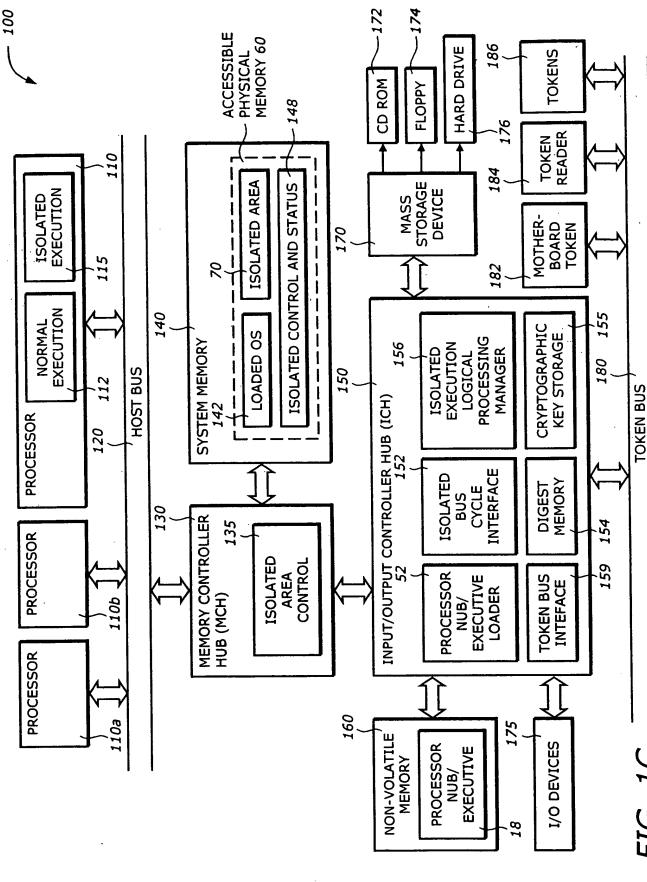



FIG. 1C

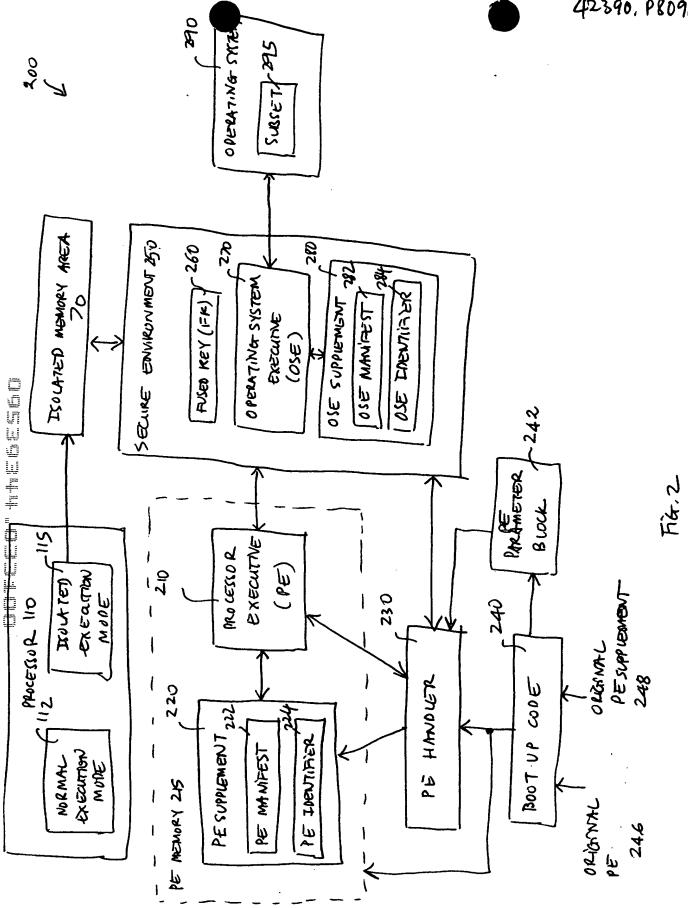

F14.3

Fig. 4

270

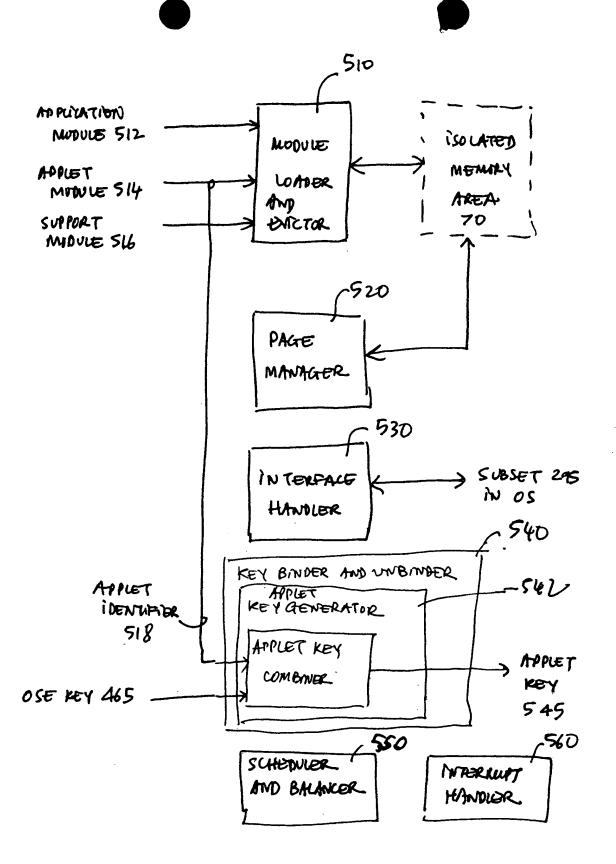

F16,5

START 710 BOOT UP PLATFORM FOLLOWING PUWER-ON 720 HANDLE A PROCESSOR EXECUTIVE (PE) USING FUSED KEY AND PE SUPPREMENT 730 HANDLE AN OPERATING SYSTEM EXECUTIVE (OSE) IN A SECURE ENMROWMENT. 740 MANAGE A SUBSET OF AN OPERATING SYSTEM (OS) RUNNING ON PLATFORM

FIG 7

LOCATE PE AND PE SUPPLEMENT INTO


PE MEMORY AT A PE ADDRESS

RECORD PE ADDRESS IN PARAMETER BLOCK


EXECUTE ISOLATED CREATE INSTRUCTION

END

F16, 8

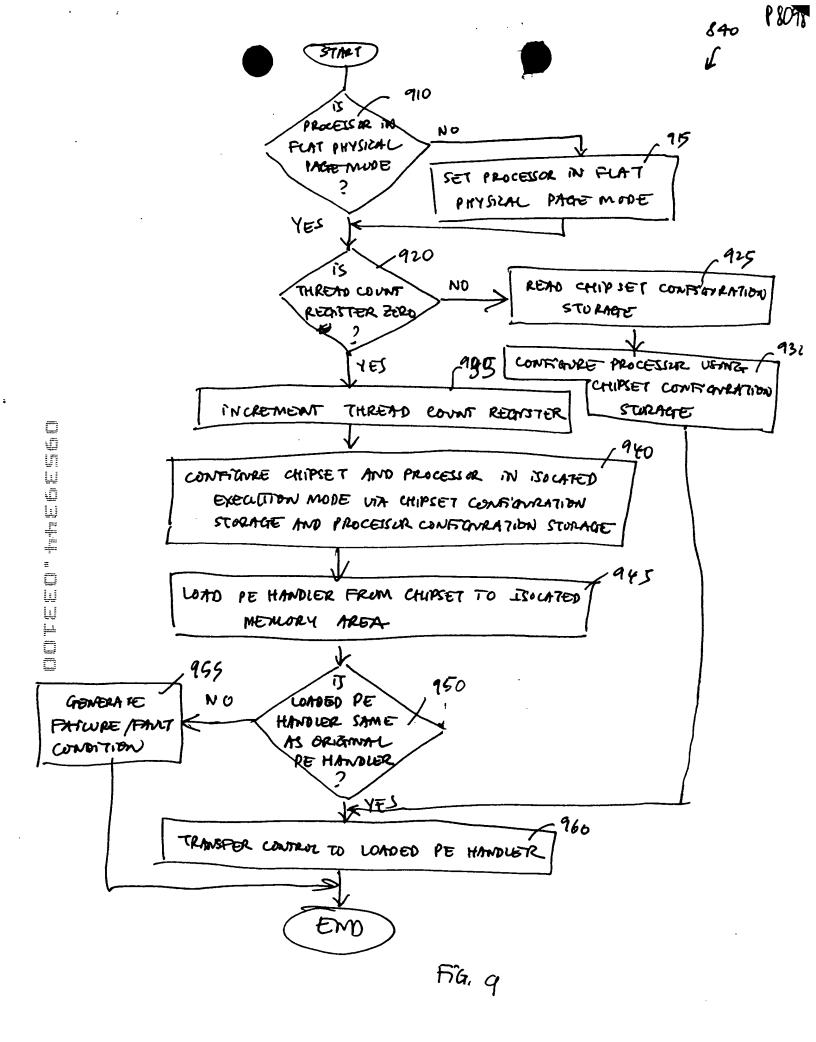

. 2-1

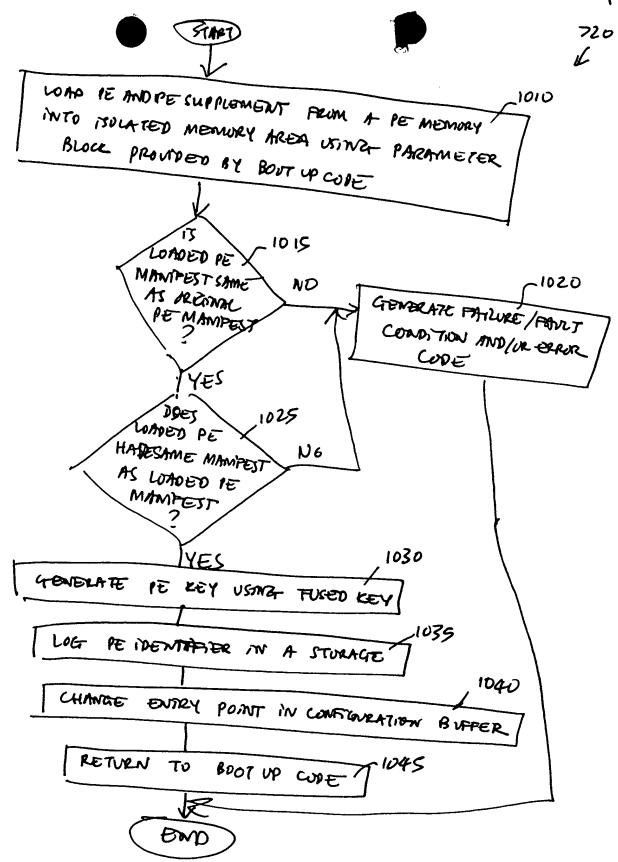

FZ-10

1.3

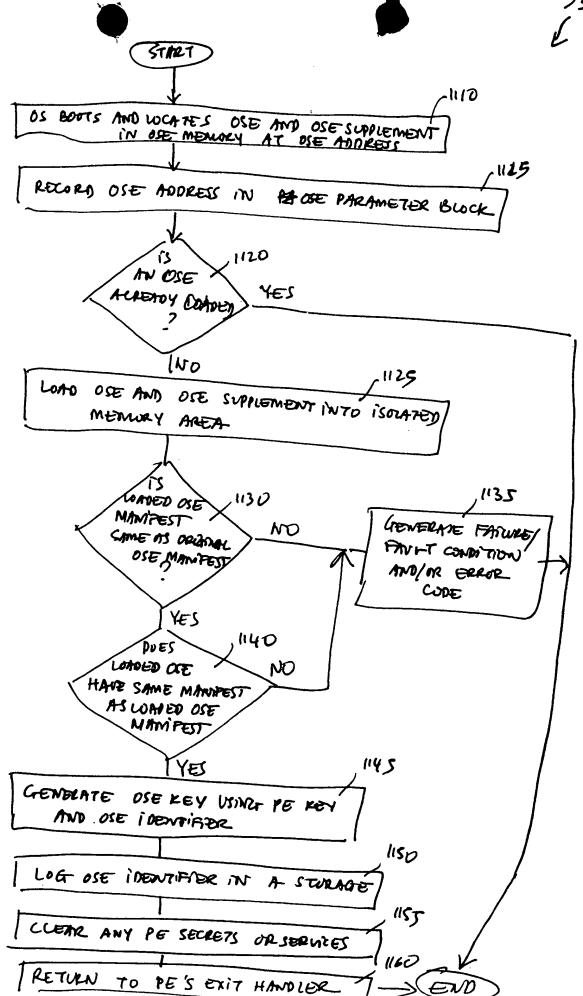


Fig.11